


TIMOKNACK

Manual

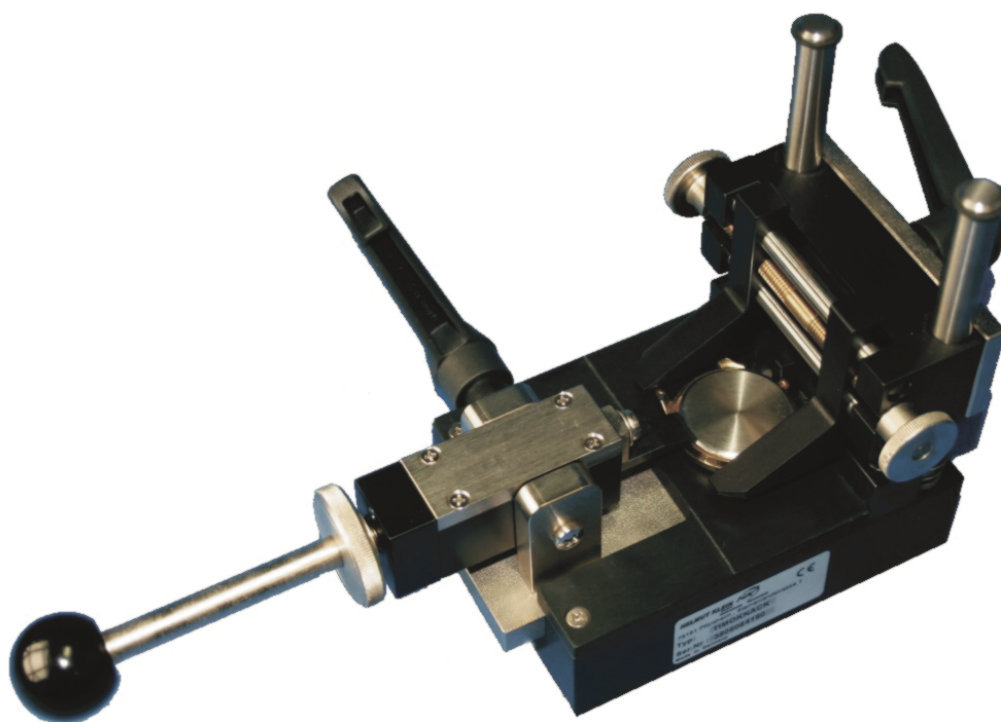

Greiner Vibrograf


Greiner Vibrograf AG
Mittelstrasse 2
CH - 4900 Langenthal
Schweiz / Switzerland
Tel : +41 / (0)62/916 60 80
Fax : +41 / (0)62/916 60 81
E-Mail: info@greinervibrograf.ch
www.greinervibrograf.ch



Helmut Klein GmbH
Fritz-Neuert-Str. 31
D-75181 Pforzheim
Deutschland / Germany
Tel : +49 / (0)7231/9535-0
Fax : +49 / (0)7231/9535-95
E-Mail: info@klein-messtechnik.de
www.greinervibrograf.ch

Security advice :

The device is intended only for opening of watch cases with pressure lock bottoms
The manufacturer excludes any liability for improper use and / or the disregard of valid safety regulations.
The user must ensure that no personal injury can result from the use of this power actuated tool.

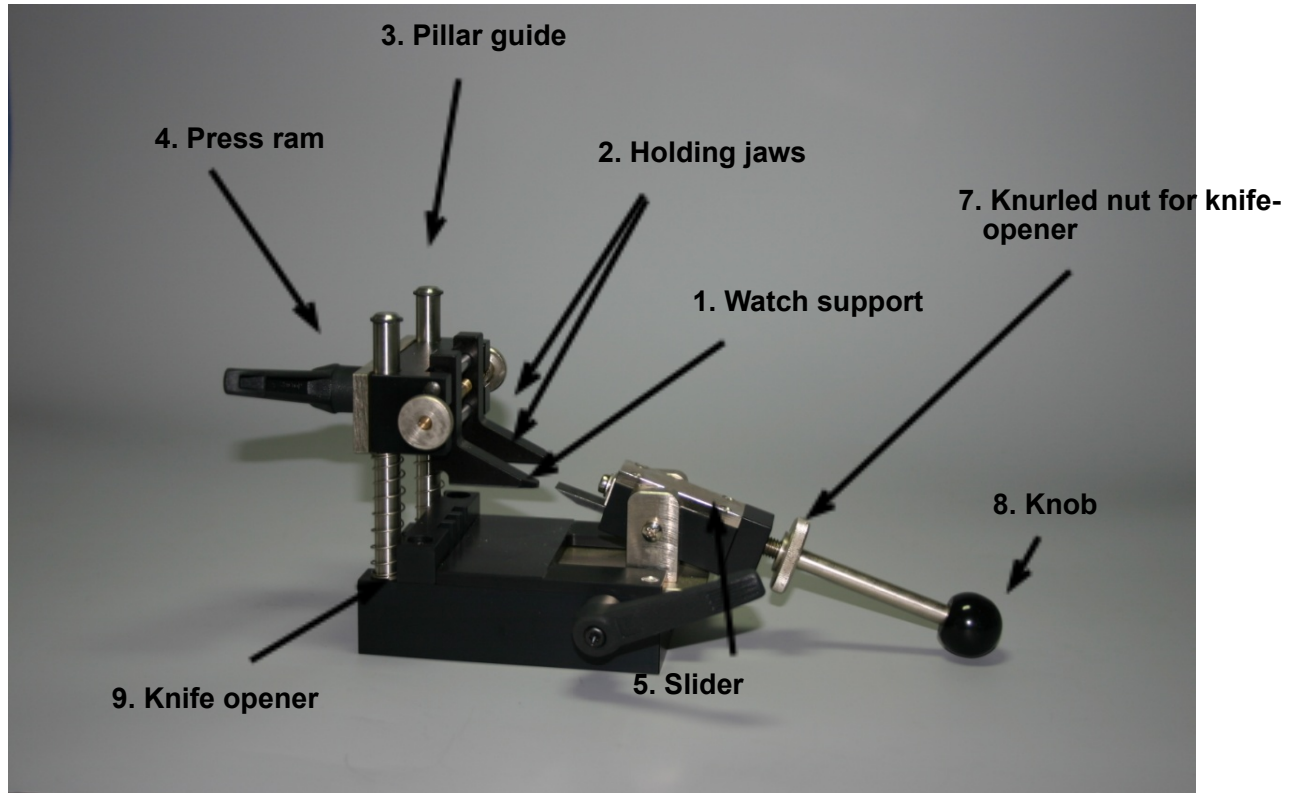

Attention:


First, screw in the enclosed hand lever into the thread of the knee lever.

Handling:

1. Place in the clock 1 with the glass down on the black rubber pad. The crown is placed in the half-round recess.


1. The two movable housing holding jaws 2 are placed so far apart with axes displaced to the right and left, that you are pressing on the two housing horns.

2. The thus-adjusted housing holding jaws are now pressed to the movable column guide 3 down on the horns and locked with the knurled nut 4.

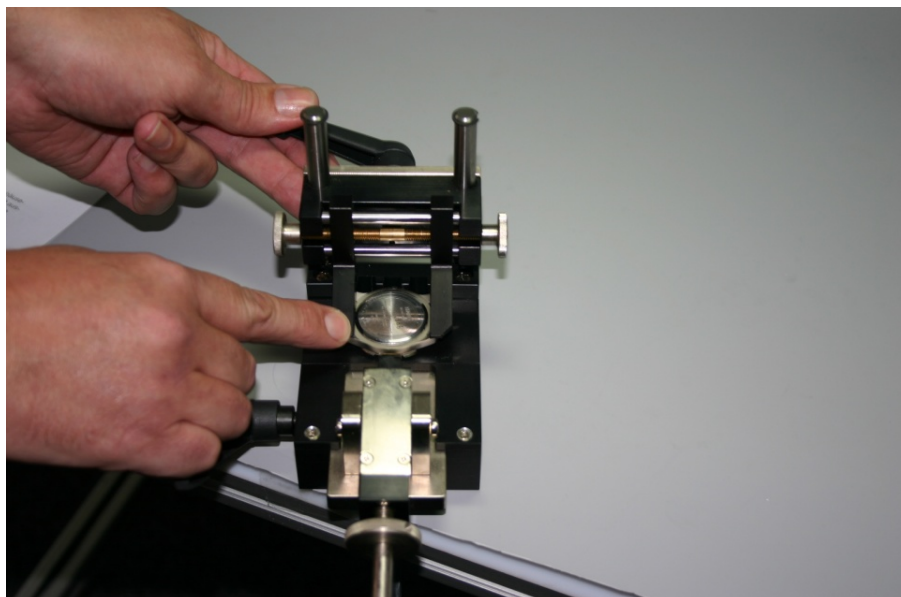


With the included screw-clamp the housing opener is placed on the workbench. Insert the enclosed knife in the slide. Push the knife in the blade until it stops.

Picture 1

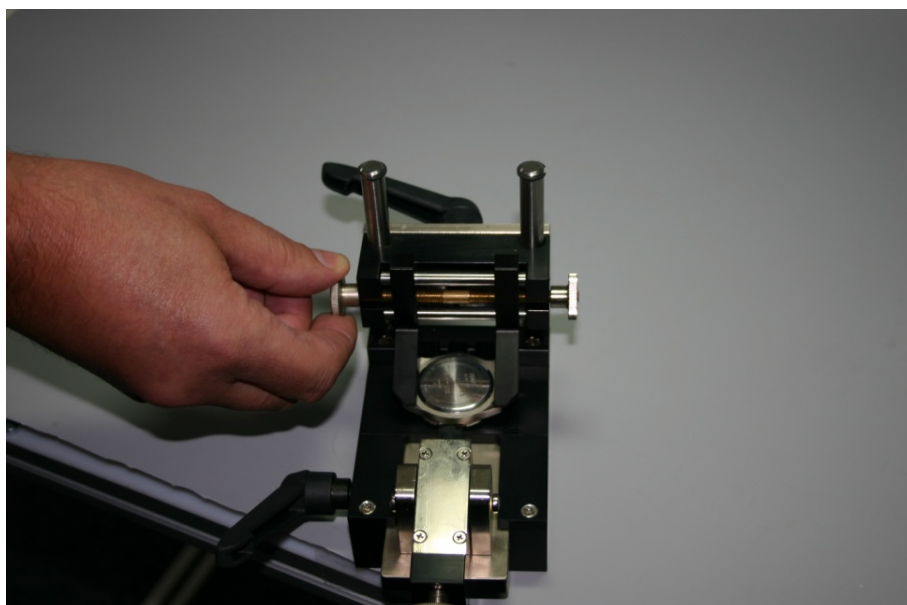


The clock that have to be open is placed with the glass down on the black rubber pad. The crown is placed in the half-round recess in the holding jaws 2 are provided as far apart that it rises to the two housing horns.

Picture 3

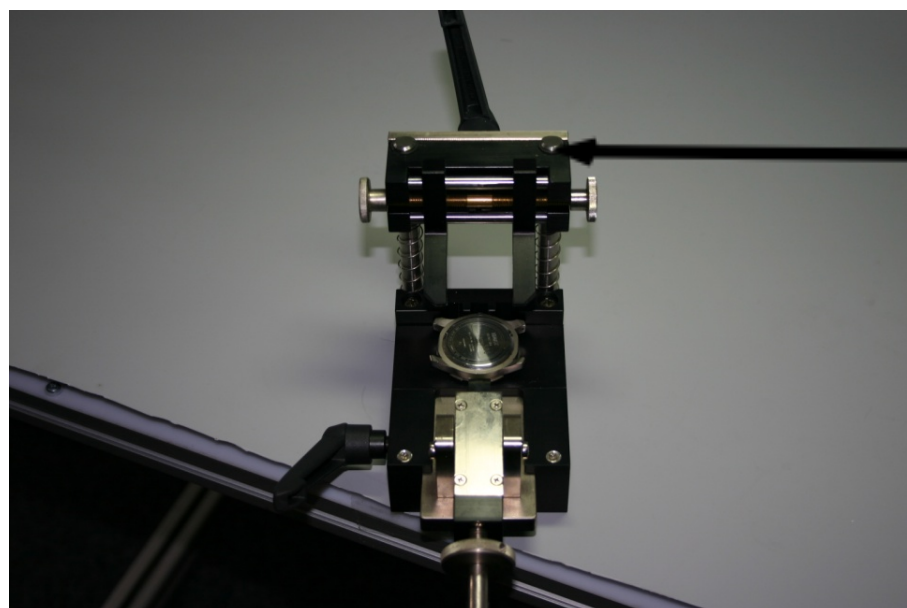


The bracket is pushed down on the housing horns and tighten the locking handle **4** .

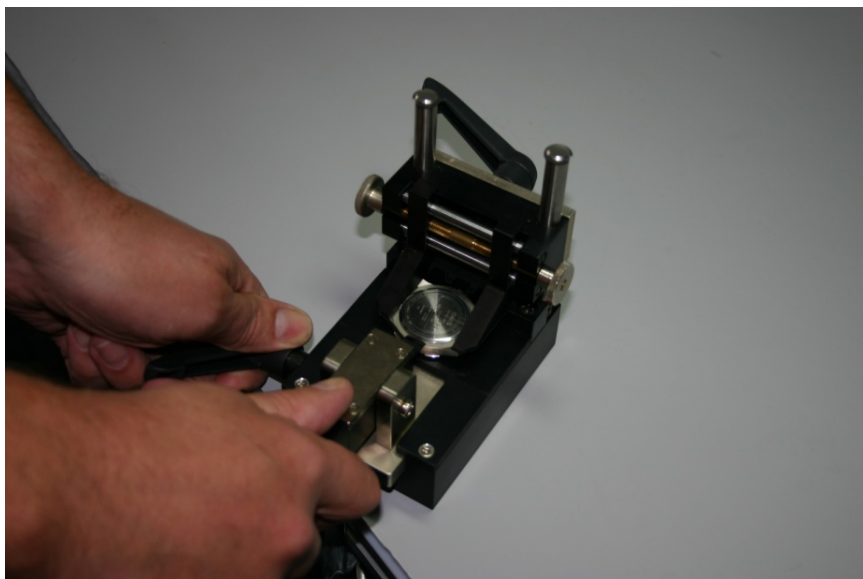


Picture 4

The slider **5** is pushed so far toward to the case until the knife is placed between ground and casing. The locking lever **6** is tightened.

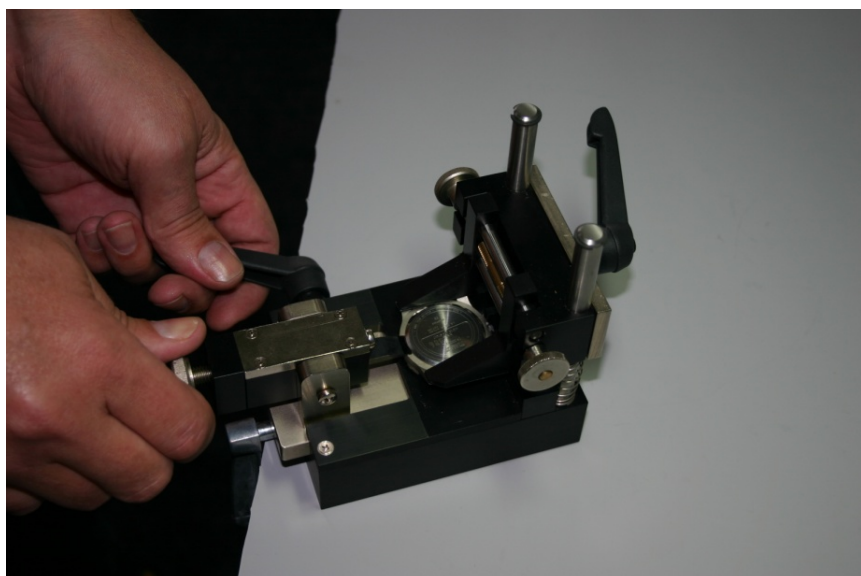

Picture 5

The knife is keyed by turning the knurled nut **7** between the floor and case. Approximately $\frac{1}{4}$ to $\frac{1}{2}$ turning of the knurled nut **7**.

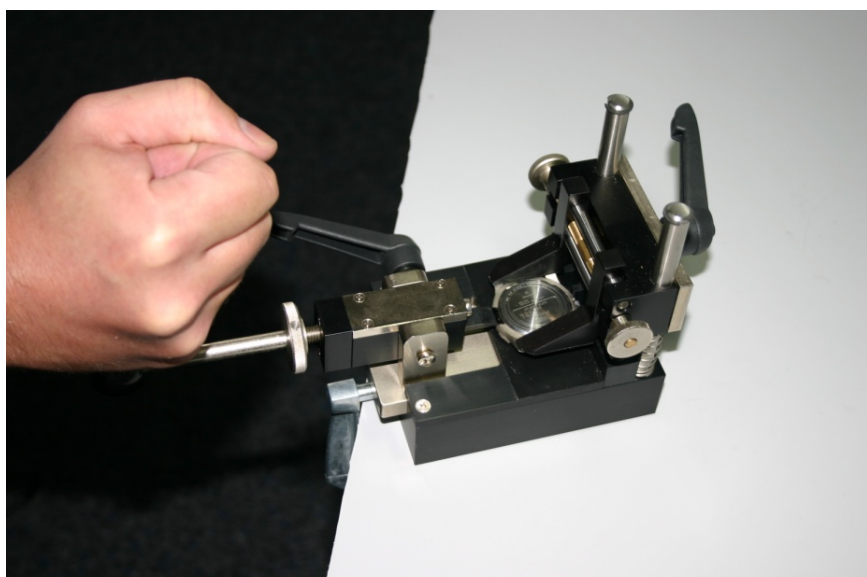

Picture 6

The case opens and jumps up, through a blow with the fist on the knob **8** from the knife actuating shaft.